

Update Mesa 2 Android Firmware

To update the firmware, you need a USB keyboard and a USB drive. To use both at once, use a docking station or a multiport USB hub.

Note: Do not use a wireless keyboard or mouse for the firmware update. These can be problematic during the update process.

To update the Mesa 2 Android firmware,

1. Download and extract the zipped firmware update files.
2. Copy the files to the root directory of a USB drive.
3. Connect wall power to the tablet.

To successfully update the firmware, quickly complete the following steps.

4. Boot/reboot the Mesa 2.
5. When the Num Lock light on the keyboard lights up, press and hold the **Esc** key on the USB keyboard.
6. From the BIOS screen, select **Boot Manager**.
7. Select **Internal EFI Shell**.
8. Press any key on the keyboard. The command prompt displays.
9. At the Shell> prompt type **FS1:** and press **Enter**.
10. At the FS1:> prompt, type **ULPMC_25.nsh** and press **Enter**.
11. Type **exit**.
12. Select continue to boot the existing OS.