

# Install Fuse on HarvestMaster Power Cable

HarvestMaster products require an ATC 20 A fuse on all power supply cables.

To install an ATC 20 A fuse,


1. Locate the positive red wire in the power cable (PN 15332) at the battery. Disconnect the red power wire from the battery if necessary.
2. Cut off 10 in. from the end of the red power wire.

*Note: If the wire was connected to the battery with a ring terminal, cut off the ring terminal.*


3. Strip 3/8 - 1/2 in. from the end of the red power wire.
4. Crimp a butt connector onto the stripped end of the red power wire.




5. Strip 3/8 - 1/2 in. from both wire leads coming from the fuse holder.

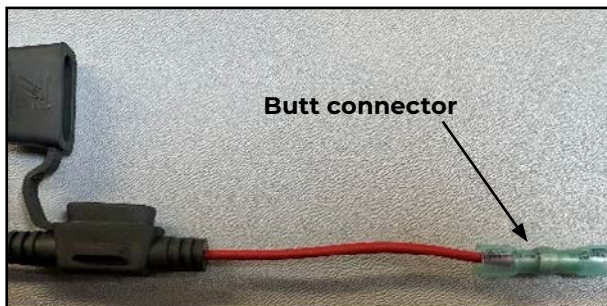

6. Insert one of the wire leads into the butt connector attached to the red power wire and crimp the connection.

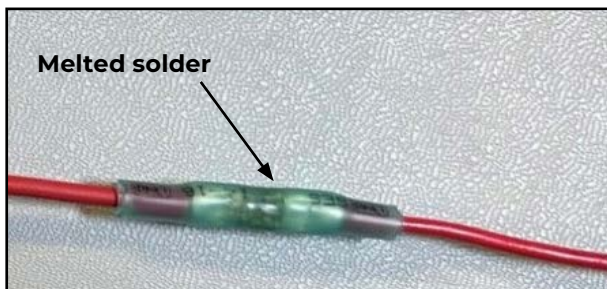

7. Heat the butt connection until the plastic forms around the wires and the solder in the center is melted.

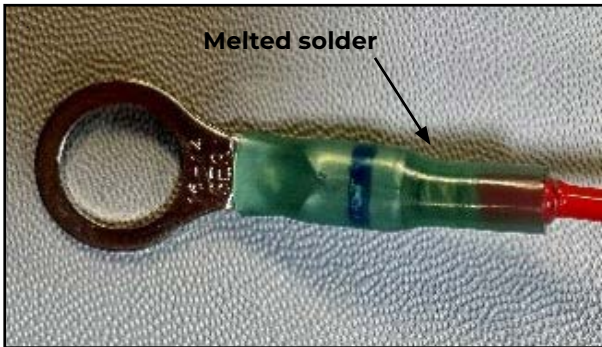

8. Crimp a ring terminal to the other stripped wire lead coming from the fuse holder.
9. Heat the connection until the plastic forms around the wire and the solder is melted.



10. Place the ATC 20 A fuse in the fuse holder and close the cap.



11. Connect the ring terminal to the battery.
12. Repeat steps 1-11 if you have an additional power cable (PN 15332).